


# GB AWE 8523

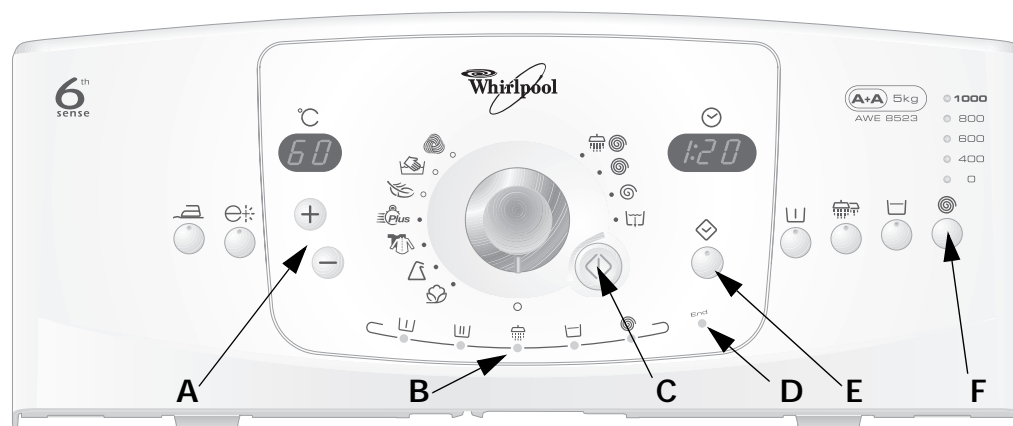

- A. Temperature Selection Buttons
- B. "Programme Sequence" Indicator
- C. "Start/Pause" Button
- D. "End of Cycle" Indication
- E. "Start Delay" Button
- F. "Spin Speed Reduction" Button










 
 

 
 
 
 
 
 
 

 
 
 

 
 
 
 

 

 
 
 

When you select an option, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.

**6<sup>th</sup> sense** intelligent technology always guarantees perfect results with the maximum efficiency whatever the wash load.

\* : option / Yes: dosing required

<sup>1</sup> Do not use liquid detergents.

<sup>2</sup> For improved garment care spin speed is restricted to 400 rpm in this programme.

Programme		Care Labels	Type of wash / Notes	Max. load  kg	Detergents and additives				Special Options						Tempera- ture  °C	Max. Spin Speed  rpm
					Prewash 	Main Wash 	Softener 	Bleach 	Easy Ironing 	ECO plus 	Prewash 	Intensive Rinse 	Rinse Hold 	Spin Speed Reduction 		
Cotton		  	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>For heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	5.0	* <sup>1)</sup>	Yes	*	*	*	*	*	*	*	*	20 to 90	1000
Synthetics		   	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	* <sup>1)</sup>	Yes	*	—	*	*	*	*	*	*	20 to 60	1000
Daily Mixed		 	Slightly to normally soiled textiles made of cotton and/or synthetics	3.0	—	Yes	*	—	*	—	—	*	*	*	30 to 60	1000
Rapid			Shortly worn outer clothing made of cotton, polyester, polyamide or blends with cotton.	3.0	—	Yes	*	—	—	—	—	*	*	*	20 to 30	1000
Delicates		 	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	* <sup>1)</sup>	Yes	*	—	—	—	*	—	*	*	20 to 40	1000
Handwash			Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	—	*	*	*	20 to 30	400 <sup>2)</sup>
Wool			Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	—	*	*	*	20 to 40	1000
Rinse + Spin		—	<i>Programme for treating the laundry with starch and softener or to moisten the laundry. For delicate laundry reduce the spin speed to 400 - 800 rpm.</i>	5.0	—	—	*	—	—	—	—	*	*	*	—	1000
Spin		—	<i>Programme to spin cotton or linen laundry intensively with maximum spin speed.</i>	5.0	—	—	—	—	—	—	—	—	*	*	—	1000
Gentle spin		—	<i>Programme to spin delicate laundry gently with a restricted spin speed.</i>	1.5	—	—	—	—	—	—	—	—	*	*	—	1000
Drain		—	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—	*	—	—

**N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.**

## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	90/40	5.0	49**/48	1.60/0.60	2:05/2:00
Cotton	60	5.0	48	0.95	2:05
Cotton + ECO plus***	60	5.0	48	0.85	2:15
Daily Mixed	40	3.0	45	0.45	1:00
Synthetics	60/40	2.0	55**/50	0.70/0.50	1:30/1:15
Rapid Plus	30	3.0	35	0.40	0:30
Delicates	40	1.5	50	0.50	0:45
Wool	40	1.0	50	0.50	0:45
Handwash	30	1.0	35	0.40	0:35

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.






\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\*Reference Programme for Energy Label

## PREPARATION OF WASH CYCLE

- Close the drum doors and check that they are properly locked.
- Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:

- Programme with pre and main wash 
- Main wash programme without prewash 
- Fabric softeners and conditioners 
- Chlorine bleach 
- Stain remover agents 

- Turn the **programme selector knob** to the desired programme.

The remaining time display shows the duration of the chosen programme (in hours and minutes) and the indicator light of the **"Start/Pause"** button flashes. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.

The preselected temperature can be altered by pressing the "+" or "-" button.

## SELECT THE DESIRED OPTION

When you select an option authorized by the programme, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.

### "Easy Ironing" button

- Can be used together with "Cotton", "Synthetic" and "Daily Mixed" programmes to make ironing easier.
- Increases the water quantity in rinsing and the clothes are spun in a softer manner.

### "ECO plus" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption can be achieved.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt).

### "Intensive Rinse" button

- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with skin allergies.

### "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.
- This option is particularly recommended for the "Synthetic", "Delicate" and "Daily Mixed" programmes.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme with "Rinse Hold" stops when the "Rinse Hold" indicator light flashes on the "Programme Sequence Indicator".

### Appliance in "Rinse Hold":

- Press the "Rinse Hold" button again: the programme will terminate automatically with the selected spin cycle.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button again.

### "Spin Speed Reduction" button


- Every programme has an automatically allocated maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed **"0"** is selected, the final spin is cancelled, but not the intermediate spins. The programme ends with a drain cycle.

## START DELAY

The "Start Delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button several times to select the delay time by 1 to 19 hours;
- Press the **"Start/Pause"** button. The indicator light of the **"Start/Pause"** button lights up and the lamp of the "Start Delay" button flashes.
- The time delay indication disappears when the programme starts and is replaced by the remaining time.
- The number of hours preselected can be reduced later by pressing the "Start Delay" button again.

### To cancel the "Start Delay" option

- Turn the programme selector to the  position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

## PROGRAMME START


Turn on the tap and press the **"Start/Pause"** button. The indicator light of the **"Start/Pause"** button lights up. The indicator lamp shows the sequence reached by the programme. After starting the programme, the programme sequence indicator signals the Wash, Rinse and Spin phases.

**Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

## LID LOCK

For safety reasons, the lid is locked during certain phases of the cycle. At the end of the cycle or during an interruption, the lid unlocks automatically after about 1 minute.

## END OF WASH CYCLE

- The remaining time is on "0: 00" and the "End" lamp lights up.
- Turn the programme selector to the  position.
  - Turn the tap off.
  - Open the lid and the drum doors and unload the machine.

## CHANGE THE PROGRAMME OR OPTIONS DURING THE CYCLE

- Select the new programme using the programme selector. If necessary, select the additional options and the spin speed. The luminous indicator of the **"Start/Pause"** button flashes.  
**Note:** the "Start Delay" and "Prewash" options cannot be selected after a programme change.
- Press the **"Start/Pause"** button. The new programme selected continues at the same position where the previous programme was interrupted.  
**Note:** Do not add detergent for this programme.

## PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

- Press the **"Start/Pause"** button. The light flashes.
- After the desired pause, press again on the **"Start/Pause"** button.

## CANCEL PROGRAMME

- Set the programme selector to "Drain".
- Press the **"Start/Pause"** button to start the "Drain" programme.